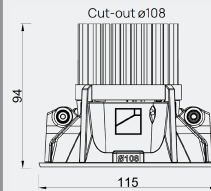



Colt and Colt Wall Washer




Colt Dimensions



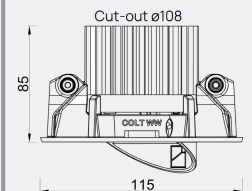
Colt Wall Washer Dimensions











UOUT 33.6V DC | IP20 |
Biopolymer UP60VDC

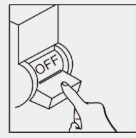

 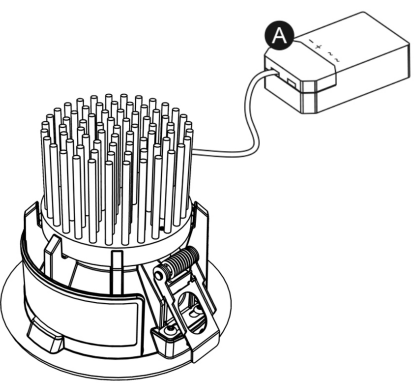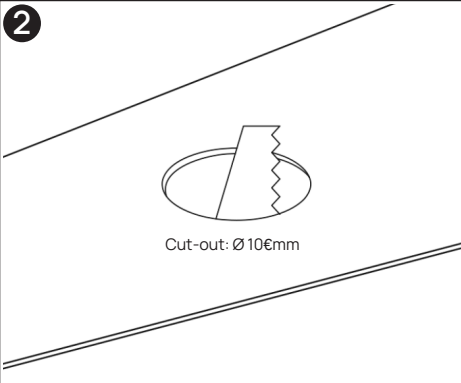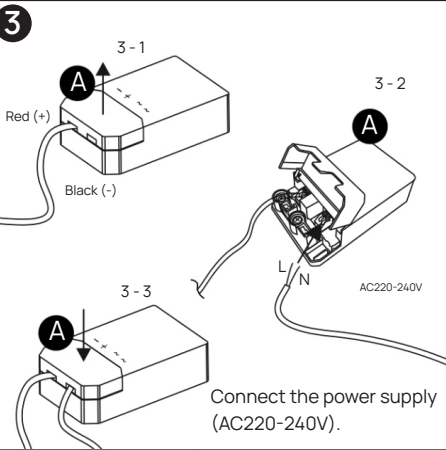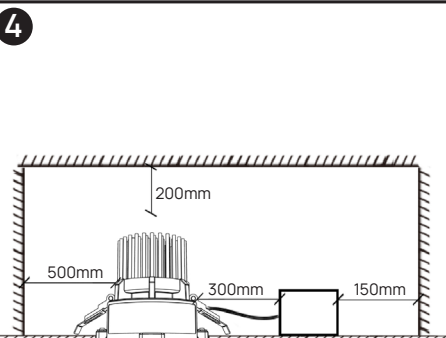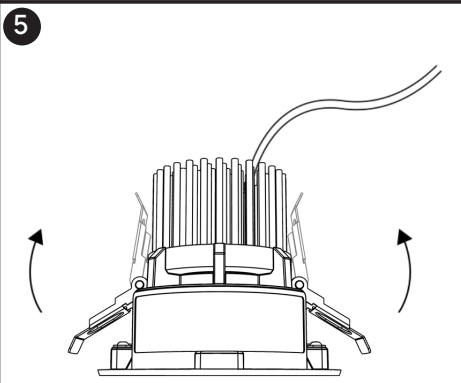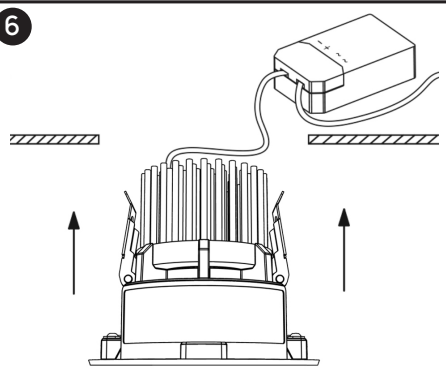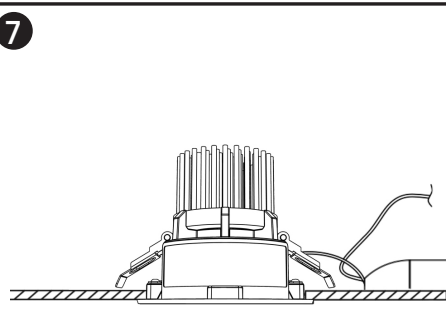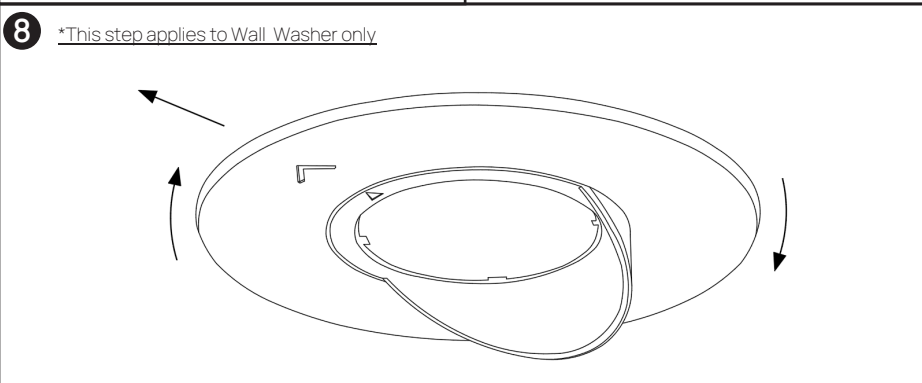Do not operate with
power supply connected.



- 1 
- 2 
Cut-out: $\varnothing 106\text{mm}$
Open a $\varnothing 106\text{mm}$ diameter hole in the ceiling.
- 3 
3-1 Red (+)
3-2 Black (-)
3-3 L/N
AC220-240V
Connect the power supply (AC220-240V).
- 4 
200mm
500mm
300mm
150mm
- 5 
Pull on the sketch clamp along the arrow direction.
- 6 
Clip upward and place the product in the hole in the ceiling.
- 7 
The installation is complete.
Switch on the power.
*See step 8 for Wall Washer Installation.
- 8 
*This step applies to Wall Washer only
Rotate Bezel to ensure arrow on bezel is pointing towards wall or intend surface to be illuminated.

Warnings:

1. Ensure the product is installed properly before connecting to the electricity supply.
2. Maintenance and installation should only be carried out by a professional electrician.
3. If in doubt, consult a qualified electrician.
4. The light source contained in this luminaire shall only be replaced by the manufacturer.

